


IDS Plug-in Zone Expander

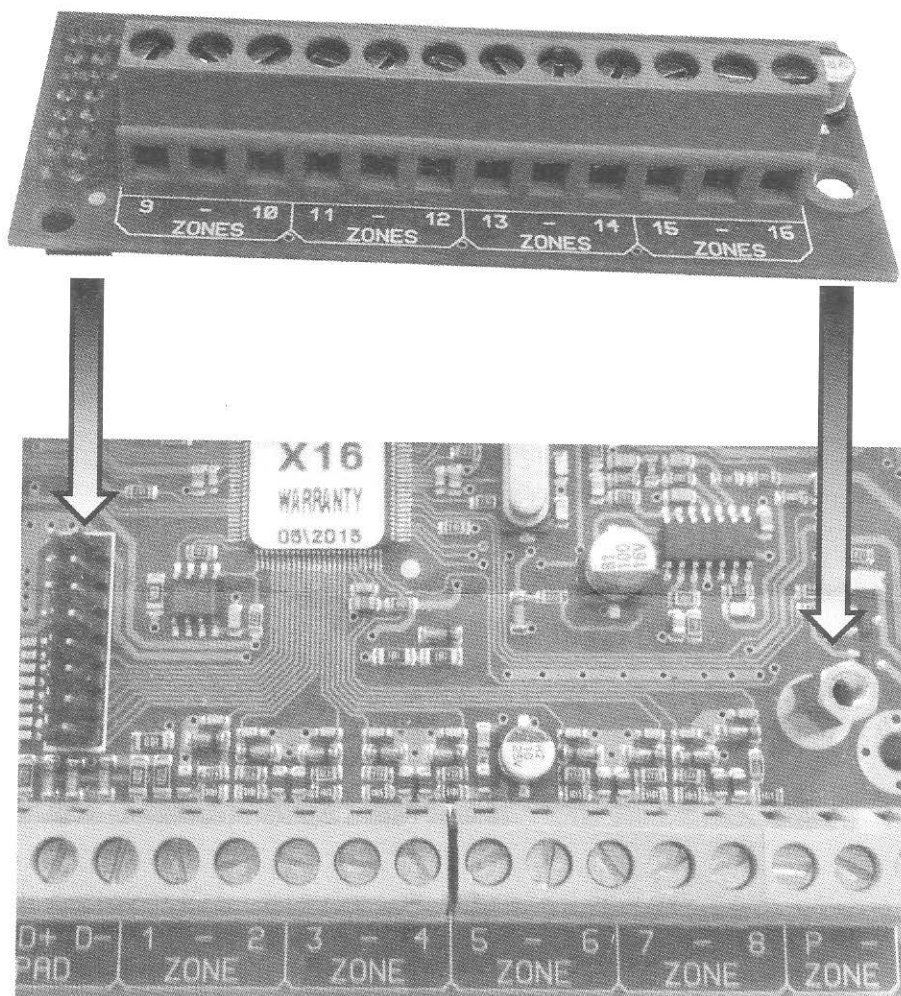

The IDS Plug-in Zone Expander connects directly onto the X64 Alarm Panel via connectors, as shown in the diagram above. The Plug-in Zone Expander is permanently allocated to zones 9-16. This cannot be changed.