



CONNECTING AN EXTERNAL RECEIVER (OPTIONAL)

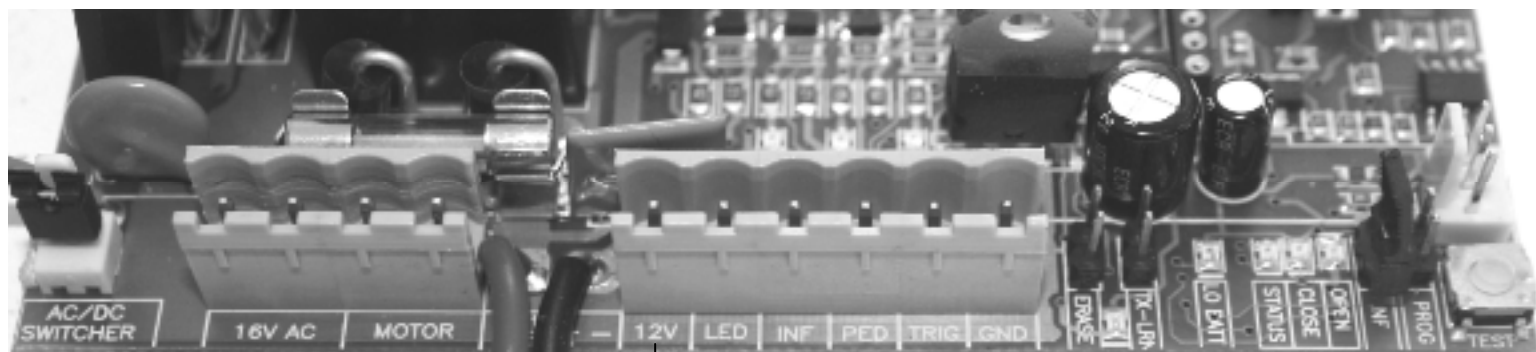

Receiver board

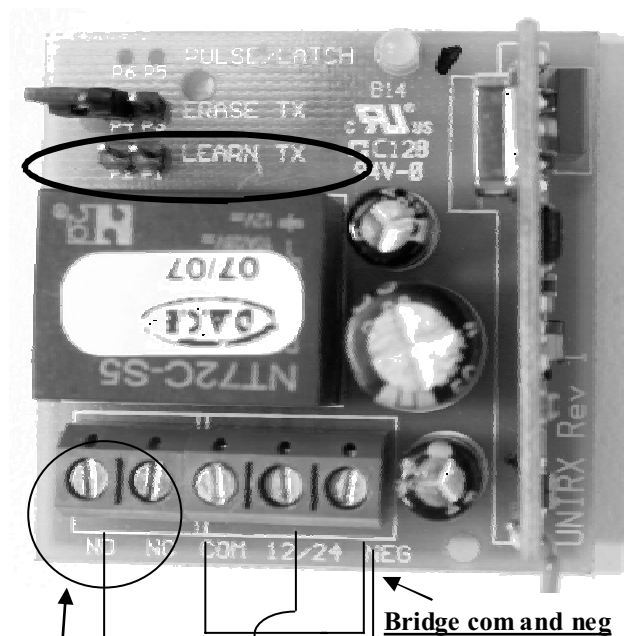

Connect to TRIG for full opening or connect to PED for pedestrian opening

NB the **normally open (NO)** connector is wired to the **TRIG** or **PED** connector on the Main P.C.Board

To program remotes to the receiver.

1. press and hold the button on the remote.
2. Place the jumper over the two TX LEARN pins for 1 second.
3. Remove the jumper.
4. Release the button on the remote.

Repeat the above steps for each remote to be programmed.