

IDS X-Series Alarm Panel

 
Quick Start Guide



THANK YOU FOR CHOOSING IDS TO PROTECT YOU

Congratulations on your purchase of an IDS X-series alarm panel. IDS X-series panels are powerful, versatile and highly configurable security systems, which should be installed by a professionally trained installer.

This Quick Start Guide covers basic user functionality. The majority of panel features are programmable only by an IDS-accredited installer in possession of the INSTALLER CODE, and are identified with this symbol: .

Advanced User Functions, identified with this symbol () are covered in the X-series Advanced User Manual, available at www.idsprotect.com.

IDS recommends using LCD keypads for all installations. For information on operation with LED keypads refer to the Advanced User Manual.

UNDERSTANDING ALARM PANEL FUNCTIONS

PANEL STATUS:

The alarm is either ARMED or DISARMED.

When DISARMED, the alarm is NOT READY is when a zone is violated. the alarm cannot be armed.

When disarmed, the alarm is READY is when all zones are closed. The alarm can be armed.

ENTERING DATA:

Press [*] to enter data

[#] to exit programming / menu or to clear data

Successful data entry – single extended keypad beep

Failed entry – triple keypad beep

SETTING DATE AND TIME

The Panel EVENT LOG, as well as some features depend on the panel having an accurate date and time. The panel can lose date and time if a power failure is longer than the backup battery life

SET THE TIME

Hold [*] until BEEP; enter MASTER CODE [*] [40] [*] [TIME] [*] [#]

Note: TIME format is HHMM

SET THE DATE

Hold [*] until BEEP; enter MASTER CODE [*] [41] [*] [DATE] [*] [#]

Note: DATE format is DDMMYY

EMERGENCY ALARMS

Emergency alarms can be triggered:

- on the keypad by holding [F] for fire, [P] for panic, or [M] for medical, or
- Via Fixed Panic Buttons installed by the alarm installer, or
- Via an IDS remote transmitter, holding down any button for 3 seconds or a dedicated button. (Please confirm with installer)

ARMING and DISARMING YOUR ALARM

X-series panels provide multiple arming methods and modes to suit your lifestyle.

AWAY ARM

Use AWAY ARM when you are leaving the premises, all zones are armed and entry / exit zones will give the delay when exiting & entering.


To away arm:

1. Enter USER CODE or hold down [1] until keypad beeps
2. Exit premises via entry/exit zone before exit delay beep sequence completes

STAY ARM

Use STAY ARM when you want some zones armed and others bypassed. Stay zones are automatically bypassed & no exit or entry delay.

1. Select your stay profile. (Up to 4 profiles available Hold [MODE] until "beep", enter [2] [*] [PROFILE NUMBER] [*]
2. Hold the [5] key until the "beep". (Holding [5] down again will switch to the next profile.

 **ADVANCED OPTIONS:** Create and customise Stay Profiles, allocate zones to Stay Profiles, create BUZZ zones

STAY & GO ARM

Use STAY AND GO when wanting to stay arm but also activate the entry & exit delays.

1. Hold [6] until BEEP
2. Exit premises via an entry/exit zone before exit delay beep sequence completes

DISARM

1. Enter through nominated entry/exit zones
- Enter USER CODE before countdown is complete

REMOTE ARM / DISARM

Use your remote transmitter to arm / disarm by pressing the programmed button

 **ADVANCED OPTIONS:** Buttons can be designated different functions or to partitions

WORKING WITH ZONES

BYPASS A ZONE

Bypass a zone to prevent it triggering an alarm when armed

1. Confirm panel is DISARMED
2. Hold [9] till BEEP, [ZONE NO] [*] [ZONE NO] [*] etc. (A user code may be needed if the option is enabled)

Note: Bypassed zones will be cleared when system is disarmed

Panic zones can be bypassed only if programmed version 2.3.

CHIME ZONES

The keypad will chime when a CHIME ZONE is violated while the panel is DISARMED

To setup chime zones:

1. Hold [2] until BEEP, [ZONE NO] [*]

Note: Used for sensitive areas as an early warning.

VIEWING PANEL INFORMATION

VIEW ALARM MEMORY

View zones that were violated, bypassed or tampered during the last arm cycle

1. If ARM LED is flashing, there are events in ALARM MEMORY
2. Confirm panel is DISARMED
3. Hold [0] till beep
4. Press [1] [*] to view violated zones
5. Press [2] [*] to view bypassed zones
6. Press [3] [*] to view tampered zones
7. Press [6] [*] to view event log.

Note: ALARM MEMORY is cleared with next ARM cycle

ADJUST KEYPAD BUZZER VOLUME

1. Hold [#] WITH any key from [0] to [6] for 1 second

Key Entry	Keypad Buzzer Sound	Key Entry	Keypad Buzzer Sound
[#] [3]	Loud (Default setting)	[#] [6]	2kHz (High)
[#] [2]	Medium	[#] [5]	1kHz (Medium)
[#] [1]	Soft	[#] [4]	440Hz (Low)
[#] [0]	Click		

WORKING WITH STAY PROFILES

STAY PROFILES enable a user to ARM while bypassing programmed zones. This is useful when users are in the premises, but want some zones armed.

CREATE STAY ZONES

STAY ZONES are automatically bypassed when a panel is STAY ARMED. STAY ZONES are allocated to one of four STAY PROFILES.

1. Select the desired STAY PROFILE. Hold [MODE] until beep [2] [*] [PROFILE NUMBER] [*]
2. Allocate STAY ZONE. Hold [3] until BEEP, ZONE NO [*]

CREATE BUZZ ZONES

BUZZ ZONES give users warning of a zone being violated before reporting an ALARM to the control room. The keypad will BEEP for 30 seconds if a BUZZ zone is violated while the panel is STAY ARMED. If a valid USER CODE is not entered in this period, an alarm status will be reported to the control room.

1. Hold [4] until BEEP, ZONE NO [*]

Note: A zone cannot be a buzz zone and a stay zone

WORKING WITH PARTITIONS

Partitions allow the alarm panel to create entirely separate alarm areas, with dedicated USER CODES and programming.

CHANGE PARTITION VIEW ON KEYPAD

1. Hold [MODE] till BEEP, then [1] [*] [PARTITION NUMBER] [*]

ARM A SPECIFIC PARTITION

1. Select Partition as above
2. Arm as per normal

SEE ALSO

🔧 *Advanced Feature: Assign user code to a partition*

✂ *Installer Features: Create partitions, allocate zones to partitions, manage keypad / partition allocation*

CODES

OVERVIEW OF CODES

The X-Series Panel supports multiple types of CODES, allowing for flexibility in use:

✂ The INSTALLER CODE and DOWNLOAD CODE are for the use of professional installers only.

The single MASTER CODE enables its owner to program certain user functions

USER CODES allow users to ARM / DISARM and carry out other basic functionality on the system

ADD USER CODE

1. Hold [*] till BEEP, then [MASTER CODE] [*] [0] [*] [NEW USER CODE] [*], continue until all codes are entered then [#] to exit

EDIT USER CODE

2. Hold [*] till BEEP, then [MASTER CODE] [*] [1] [*] [OLD USER CODE] [*] [NEW USER CODE] [*]

DELETE USER CODE

3. Hold [*] till BEEP, then [MASTER CODE] [*] [2] [*] [USER CODE] [*]

SEE ALSO

🔧 *Add / Delete / View USER CODE by slot number*

🔧 *View slot number by USER CODE*

🔧 *Set properties for USER CODE: MASTER CODE, DURESS CODE, MAID's CODE, ARM-ONLY CODE, DISARM-ONLY CODE, GLOBAL ARM / DISARM CODE, PROGRAMMABLE OUTPUT CODE,*

aXess

The X-Series aXess control is a good starter access control system for up to eight doors. Each door has an interface that can be installed in two configurations:

1. Two readers: one on each side of the door for entry and exit.
 2. One reader: one for entry and a push button for exit.
- Access tags can be linked to alarm codes to be able to arm and disarm the alarm.

MORE ADVANCED OPTIONS

These features are described in the IDS X-Series Advanced User Manual, available at www.idsprotect.com.

🔧 *Use AUTO ARM to ARM the panel at a certain time*

🔧 *Use NO MOVEMENT AUTO ARM or MEDICAL AUTO ARM*

🔧 *Use USER OUTPUTS to enable home automation*

🔧 *Manage USER REPORTING*

🔧 *Manage remote transmitters*

🔧 *Managing aXess*

IMPORTANT INFORMATION

- Alarm Panels are not infallible
- The quality of installation of your panel will determine its effectiveness.
- Do not access or program locations reserved for professional installers as this might compromise your installation
- Test the system regularly

VIEWING TROUBLE CONDITIONS

Flashing POWER LED indicates trouble condition. To identify trouble condition:

1. Hold [7] till BEEP

✂ Call an IDS-certified installer out to resolve the trouble

Quick Guide

Add User Code

Hold down [*]
Enter [master code] [*] [0] [*]
Enter [new code] [*] [NC] [*]...
Press [#] to exit

Edit User Code

Hold down [*]
Enter [master code] [*] [1] [*]
Enter [old code] [*]
Enter [new code] [*]
Press [#] to exit

Quick Commands

Arm/Disarm	[user code]
Quick Away Arm	Hold down [1]
Quick Stay Arm	Hold down [5]
Quick Stay & Go	Hold down [6]
Alarm Memory	Hold down [0]

User Features

Chime	Hold down [2] [zone] [*] [#]
Stay	Hold down [3] [zone] [*] [#]
Buzz	Hold down [24] [zone] [*] [#]
Bypass	Hold down [9] [zone] [*] [#]

IMPORTANT INFORMATION

Date Installed:

Installer Name:

Control Room Number:

For any user queries please phone the IDS helpdesk: 0860 705137

Website: www.idsprotect.com