


Installation Instructions


- 1.** Unlock and remove bolt.
Note: Bolt may be inserted from opposite end to accommodate installation.




- 2.** Mark and drill 2, 1/8" holes.

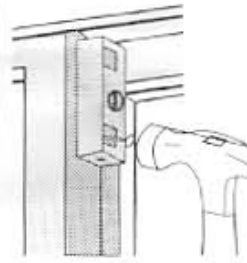


- 3.** Mark location for bolt and drill 1/2" hole.

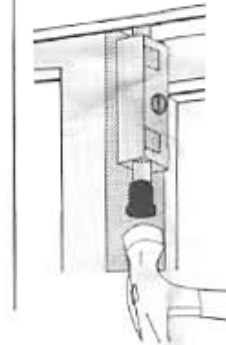

- 4.** Attach lock to frame and insert plastic plugs.

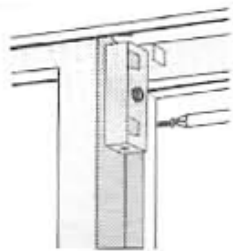

- 5.** For ventilation, open door 4" and repeat step #3.

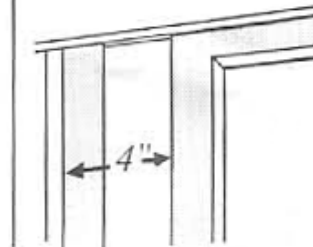

- 6.** Install strike as shown.

