

Choosing the Right Burglar Guard

Security as easy as 1-2-3. To install an Xpanda burglar guard is a simple task. Please read these instructions first and then go about making your own home as secure as the finest security products on the market will allow.


1. DO YOU HAVE WOOD OR STEEL FRAMED WINDOWS?

Select the correct burglar guards according to the header cards that are clearly marked **WOOD** or **STEEL**.

2. MEASURE THE WINDOW FRAME OPENING OF YOUR WINDOW

Do not measure the window itself. Instead, measure between the inside edges of the frame of the window. To measure accurately, open the window completely. To get the correct measurements, measure:

- a) From inside top to the inside bottom of the frame
- The height (Diagram A)
- b) From inside left to the inside right of the frame
- The width (Diagram b)

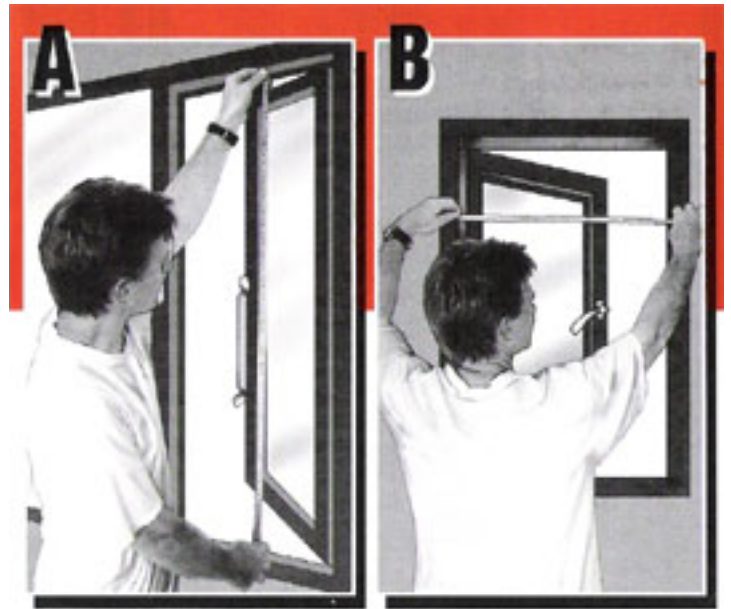

3. SELECT YOUR BURGLAR GUARD

Use the tables to select your required burglar guard. For TOP HUNG WINDOWS Simply reverse the measurements i.e use the height as the width and the width as the height.


For WOODEN frames:

DAYLIGHT WIDTH (mm) left to right	DAYLIGHT HEIGHT (mm) top to bottom	SIZE OF BURGLAR GUARDS REQUIRED
480 - 510mm	200 - 400mm	530 - 160mm
480 - 510mm	450 - 670mm	530 - 450mm
480 - 510mm	700 - 950mm	530 - 700mm
480 - 510mm	1000 - 1250mm	530 - 1000mm
480 - 510mm	1300 - 1550mm	530 - 1270mm
900 - 1030mm (Cape 1020 - 1060mm)	200 - 400mm	1060 - 160mm (Cape 1090 - 106mm)
890 - 920mm	450 - 650mm	950 - 410mm
790 - 825mm	450 - 650mm	845 - 410mm
440 - 470mm	500 - 590mm	475 - 410mm
500 - 550mm	500 - 590mm	565 - 410mm
840 - 860mm	450 - 650mm	885 - 410mm

For STEEL Windows:

DAYLIGHT WIDTH (mm) left to right	DAYLIGHT HEIGHT (mm) top to bottom	SIZE OF BURGLAR GUARDS REQUIRED
440mm	275mm	460 - 160mm
440mm	565mm	460 - 410mm
440mm	860mm	460 - 700mm
440mm	1155mm	460 - 1000mm
440mm	1445mm	460 - 1270mm
940mm	275mm	950 - 160mm
1425mm	275mm	1440 - 160mm
940mm	565mm	950 - 410mm

Burglar Guard Fitting Instructions

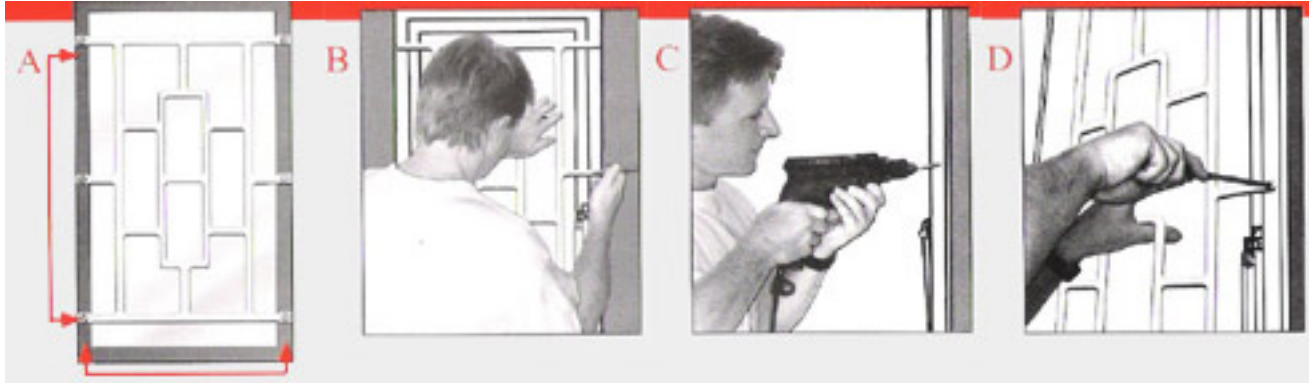

A. Having measured your window frames, take measurements for width of burglar guards. Be sure to allow for a gap above and below.

B. Marking the Fixing Points On Your Window Frame: With the burglar guard neatly and accurately held in place, mark the fixing points. (Make sure the burglar guard is held upright and not skew!)

C. Pre-drill holes using a 4.2mm drill bit. (Take care to check that the burglar guard is straight before fastening the Xpanda one-way screws. Once tightened, they're not easily undone!)

D. Secure screws as shown. Xpanda supplies specially designed one-way security screws with your burglar guards. Always use these.